


# RC-527

## Operation Manual

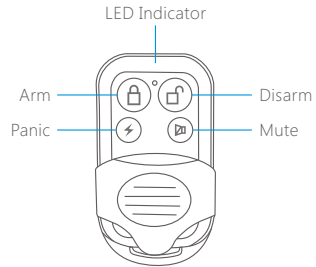

### Features

The remote control enables you to turn the alarm system on and off before entering the home or after exiting. If there is an emergency, press panic button on the remote control to trigger the panel. RC-527, compact and portable, is designed to fit on a keychain, in a pocket, or in a purse.

### FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### LED Indication

**LED flashes once:** sends the transmitting signal  
**Low light-level:** Low battery, please replace the battery immediately.

### Specifications

**Power supply** Layer-built 12V/27A battery x1pc  
**Alarm current** ≤ 9mA  
**Transmitting distance** ≤ 80m (in open area)  
**Radio frequency** 315.8599MHz  
**Housing material** ABS plastic + Zinc alloy+stainless steel  
**Operating temperature** -10°C~55°C  
**Relative humidity** ≤ 80% (non-condensing)  
**Dimensions (L x W x H)** 58.90 x 32.75 x 13.60mm

### Usage

	Arm	Press to arm the alarm panel and all of the accessories. (Away Mode)
	Disarm	Press to disarm the security system.
	Stay	Press to arm all sensors except the ones in zone A, sensors in zone A will not activate an alarm. (Home Mode)
	Panic	Press to activate a panic alarm and the control panel auto-dials the pre-set phone numbers immediately.
	Mute Arm	Press to arm the system in mute.
	Mute Disarm	Press to disarm the system in mute.