
Remote Control User Manual

The compact and elegant remote control is easy to carry. It is designed to fit on a key chain, a purse, a pocket or to be hidden in the car sun visor. This remote control act as multi-purpose key for arming, disarming, arming stay, and emergency call.

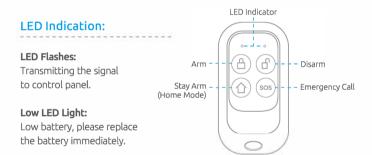

Specifications:

Power Supply: DC 3V(1pc CR2032 button cell battery)

Transmitting: ≤ 6mA

Transmitting Distance: ≤80m (in open area)

Transmitting Frequency: 315MHz/433MHz (±75KHz)

Housing Material: ABS plastic
Working Temperature: -10°C-55°C

Humidity: Up to 80% (non-condensing)
Dimension(L/W/H): 35x70x12 mm

Button Manual



Press the arm button to arm the system before leaving your home, arming LED (left) flashes once. any detectors (in Normal Zone)



triggered will activate the system to alarm immediately. The system simultaneously calls the preset phone numbers.



Disarm

Press the disarm button before entering your home, disarming LED (right) flashes once. Then you are able to move freely in your home without



triggering the alarm. In the event of alarm, you can press this button to disarm the system and silence the siren.



Mute Mode

Press stay arm button, then press arm or disarm button within 3 seconds to enter into arming or disarming state in mode without disturbina mute someone.



Stay Arm (Home Mode)

Press the stay button. arming LED (left) flashes once, the siren beeps once. system is in stay arm mode. The accessories in home



mode are disarmed, this allows the user to move freely at home, while the rest of the system is fully armed, the accessories in normal zones will activate an immediate alarm when triggered.

Emergency Call

Once there's an emergency situation, no matter what state the alarm system is in, press SOS button once for help, both LED flashes

