

ZRC-100 (Z-Wave Remote Controller)



Table of Contents

Introduction	4
Glossary	5
Product Overview	6
Description of Function Keys	6
Setup and Operations	7
ZRC-100 User Interface Layout	8
Operations	10
Add/Delete Devices	11
Device Control	14
Scene Setup	16
Scene Control	19
Comfort Control	20
Sensor Information	21
Device Configure	21
Scene Configure	24
Comfort / Sensor Configure	26
Shortcut Key	29
Z-Wave Advanced Setup	33
Configure Association	33
Change Device Configuration	39
Resetting Your Network	41
System Settings	42
About ZRC-100	44
Z-Wave Network Setup	45
Learning Mode	45
Scan Devices from network	46
Create a Primary Controller	48
Create a Secondary Controller	49
Rediscover Network (N.W.)	51
Delete Dead Node from Network	52
Listening Mode	
Wireless Information	
Maintenance	
Frequently Asked Questions	55
Technical Specifications	EO

Checking Accessories	60
FCC Notice	60
Warnings	60
Caution	61

ZRC-100

(Z-Wave Remote Controller) Operating Instructions

Introduction

The ZRC-100 (Figure 1) is a portable Z-Wave remote controller with multi-channel support; also it is a Z-Wave Enabled Security Controller. It can control the secured door locks when it is in the security network. Also, it can be configured as a primary or secondary controller within a Z-Wave home automation network. It works with almost every Z-Wave enabled devices, binary switches, dimmers, curtains, thermostats, secured door locks, binary or multi-level sensors. Users can control their Z-Wave enabled devices individually or through "Scene" control. Scene is a collection of Z-Wave devices configured to a user-preferred settings, levels, modes or operating conditions. The ZRC-100 also equipped with a backlit LCD screen, users can setup and operate their Z-Wave devices through the LCD user interface by using their ZRC-100, and enjoy a networked, wireless home automation system anywhere at home.



Figure 1 ZRC-100

Glossary

	Devices and nodes are all terms to describe	
Device or Node	an individual Z-Wave device. These are all	
Device of Noue	interchangeable when setting up your Z-	
	Wave network.	
Inclusion Add a Z-Wave device to the network.		
Exclusion	Delete a Z-Wave device from the network.	
	To take a device out of a group, scene or	
Remove	association group while that device still	
	exists in the same Z-Wave network.	
	A collection of Z-Wave devices controlled by	
	primary and secondary controllers operating	
Z-Wave	on the same system. A Z-Wave network has	
Network	its own unique ID code so that controllers	
	not in the network cannot control the	
	system.	
	The first controller used to set up your	
	devices and network. Only the Primary	
Primary	Controller can be used to include or delete	
Controller	modules from a network. It is recommended	
	that you mark the primary controller for	
	each network for ease in modifying your	
	network.	
	A controller containing network information	
	about other modules within the network	
Secondary	and is used for controlling devices.	
Controller	Secondary controller is created from the	
	Primary Controller and cannot include or	
	delete modules to the network.	
	A controller containing network information	
	about other modules within the network	
Inclusion	and is used for controlling devices. Inclusion	
Controller	controller is created from the Primary	
	Controller in a SIS enabled Z-Wave network.	
	Inclusion Controller has the ability to add	
	and remove devices from the network.	
	A collection of Z-Wave devices configured to	
C	turn to a specific level, setting, mode, or	
Scene	perform an operation. Scenes are usually	
	activated by a controller, timed event, or	
	specific conditions.	

Product Overview

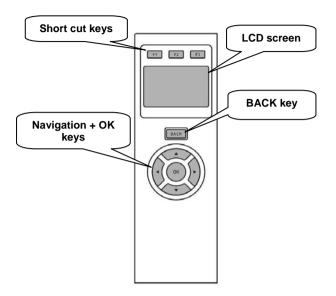


Figure 2 Setup and control keys of ZRC-100

Description of Function Keys

Keys	Functions	
F1 F2 F3	Short cut keys for: 1. Device and scene control 2. Short cut to user selected control menu	
BACK	Back to previous screen	
a OK I	4-way directional keys for setup and control OK key for confirmation	

Setup and Operations

Welcome to the world of Z-Wave home automation, you can use your ZRC-100 to control almost every Z-Wave certified products inside your house. The following section will guide you through the set up processes and operation procedures for your ZRC-100.

Please note that all Z-Wave devices, light switches, dimmers, shutter switches, curtains, thermostat and secured door lock made from various vendors are compatible with your ZRC-100 as long as they are Z-Wave certified or carry the following Z-Wave logo:



(Please carefully read through the following sections of this user manual and store for future reference.)


Before using the ZRC-100, please install the batteries:


- 4xAAA batteries are required for operation.
- Remove the battery cover on the back of your remote.
- Check the polarity of the batteries and the "+/-" marks inside the battery compartment.
- Insert the batteries.
- Push the battery cover back in place.

① CAUTION (battery safety)

- Use new batteries of the recommended type and size only.
- Never mix used and new batteries together.
- To avoid chemical leaks, remove batteries from the remote controller if you do not intend to use the remote for an extended period of time.
- Dispose of used batteries properly; do not burn or bury them.

ZRC-100 User Interface Layout

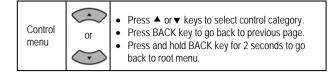

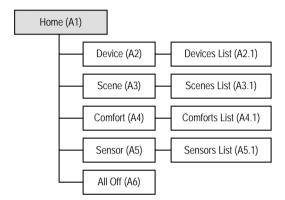


Setup menu



- Press BACK key to go back to previous page.
- Press and hold BACK key for 2 seconds to go back to root menu.


Setup (B1)

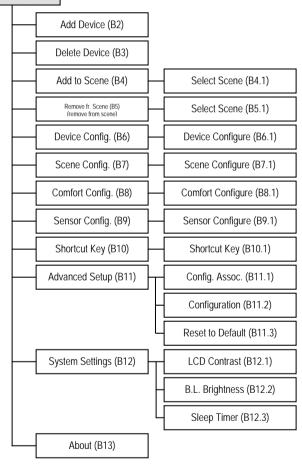

Network Setup menu



- Press and hold ▲ ▼ keys simultaneously for 3 seconds to enter Network Setup menu.
- Press BACK key to go back to previous page.
- Press and hold BACK key for 2 seconds to go back to root menu.

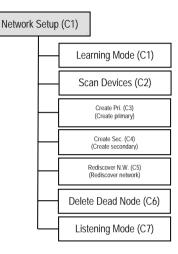

Operations

The ZRC-100 remote controller can be set up as a Primary or Secondary Controller within a Z-Wave network.

The ZRC-100 can control Z-Wave devices individually or as a group using Scene or Association. A single Z-Wave network can include 232 nodes. If necessary, more than one network can be bridged to extend the number of nodes supported, although this is normally not needed in a residential environment.

ZRC-100 control capability		
Total number of controllable	128 items	
End-point (EP) / device / sensor	(listed on the "Device" and "Sensor" page)	
Total number of thermostats	6 thermostats	
	(listed on the "Comfort" page)	
Total number of scenes	12 scenes (listed on the "Scene" page)	
Each Scene supports up to	32 Z-Wave devices or End-point (EP)	


Remark:

 User can press "BACK" key to go back to the previous page or press and hold "BACK" key for 2 seconds to go back to the root menu at any setup /operation screen.

Add/Delete Devices

Adding Device to the Network

Step	Setup Key	LCD Indication
1	Press and hold keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Setup Add Device > Delete Device > Add to Scene > OK to Enter
2	Select "Add Device".	Setup Add Device > Delete Device > Add to Scene > OK to Enter
3	Press key to add the device into Z-Wave network.	Add Device Press PROG on target

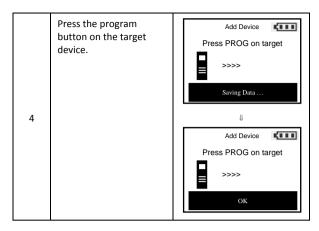

Note 1: If you can't add your Z-Wave device, this device might have been included in another Z-Wave network. In this case, please delete this device following the steps in the [Deleting Device from the Network] section then add this device again.


Note 2: This step can be skipped if the device is already included in the network.

Note 3: In a Z-Wave network, only the primary controller or inclusion controller can add or include devices into its network. If ZRC-100 is configured as a secondary controller, it will report "Error" if users attempt to use ZRC-100 to add a device into its network.

Note 4: If no ACK signal received for more than 180 seconds, the "Add Device" mode will exit automatically.

Deleting Device from the Network

Step	Setup Key	LCD Indicat	ion
	Press and hold	Home	CERT
	keys simultaneously for	Device	>
	3 seconds under the	Scene	>
	Home page.	Comfort	>
1		OK to Ente	er
		Ų	_

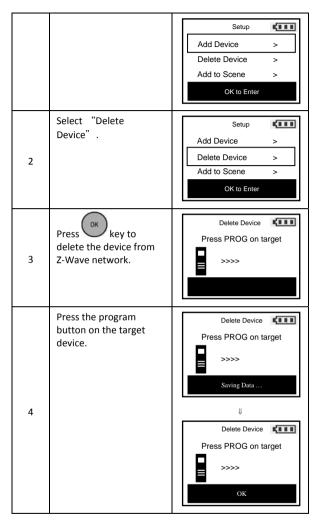


Note 1: If no ACK signal received for more than 180 seconds, the "Delete Device" mode will exit automatically.

Note 2: In a Z-Wave network, only the primary controller or inclusion controller can delete or exclude devices into its network. If ZRC-100 is configured as a secondary controller, it will report "Error" if users attempt to use ZRC-100 to delete a device from its network.

Device Control

After adding devices to your ZRC-100, you can turn the device using the corresponding Device Control function.

Step	Setup Key	LCD Indication
1	press key to confirm. A corresponding Device control page will be displayed.	Home Device > Scene > Comfort > OK to Enter Devices List Switch 001 Off Dimmer 002 Off Curtain 003 Off Off and On >
2	For on/off switches, press ▶ key to turn on the device and ◀ key to turn off the device.	Devices List Switch 001 Off Dimmer 002 Off Curtain 003 Off Off and On
3	For dimmer device, Press and hold the key to adjust the dimming value then release the key to increase the dimmer intensity. Press and hold the key to adjust the dimming value then release the key to reduce the dimmer intensity.	Devices List Switch 001 Off Dimmer 002 Off Curtain 003 Off ✓ Off and On ➤

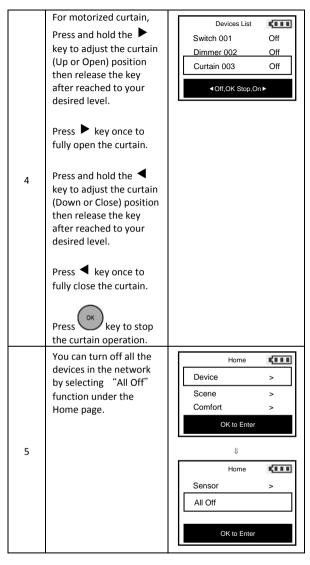

Note 1: The screen will display LOCK /UNLK if this is a secured door lock device.

Note 2: You can rename your device, please refer to user manual [step of B6 - Device Config.].


Scene Setup

Scene is a collection of Z-Wave devices configured to user specified levels, settings, modes, or operating conditions. Scenes are usually activated by a controller, timed event, or specific conditions. For example, a user prefers to set the dimmer to a low intensity level and close the motorized curtain when he watch movie. He can define a scene to control the dimmer and motorized curtain using a single scene command.

You can control up to 12 scenes (Scene On/Off) with your ZRC-100. Each Scene supports up to 32 Z-Wave devices or End-Point (EP).

Adding Device/End-point to a Scene

Step	Setup Key	LCD Indication
1	Press and hold keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Setup Add Device > Delete Device > Add to Scene >
2	Select "Add to Scene" and press key.	Setup Add Device > Delete Device > Add to Scene > OK to Enter

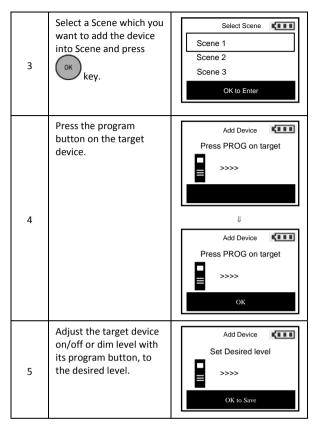


Note 1: Your target device must be included in the network before this setup procedure, please refer to [Adding Device to the Network] section.

Note 2: If no ACK signal received for more than 180 seconds, the "Add Device" mode will exit automatically.

Removing Device/End-point from a Scene

Step	Setup Key	LCD Indication
1	Press and hold ◀ ► keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Setup Add Device > Delete Device > Add to Scene > OK to Enter
2	Scene" and press	Setup Remove fr. Scene > Device Config. > Scene Config. > OK to Enter
3	Select a Scene which you want to delete the device from Scene and press key.	Scene 1 Scene 2 Scene 3 OK to Enter
4	Press the program button on the target device.	Remove Device Press PROG on target >>>>

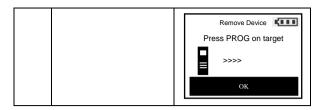


Note 1: This process will only remove the target device/EP from its assigned scene but will not exclude it from the network.

Note 2: If no ACK signal received for more than 180 seconds, the "Remove Device" mode will exit automatically.


Scene Control

After the scene setup is done, you can trigger the desired scene via scene control function on ZRC-100.

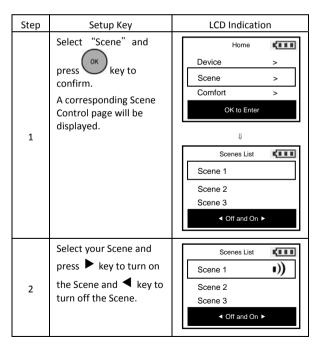


Comfort Control

After adding "Thermostat" or "Z-Wave to AC IR extender" to your ZRC-100, you can change the operation mode, set target temperature and fan speed via the corresponding Comfort Control function.

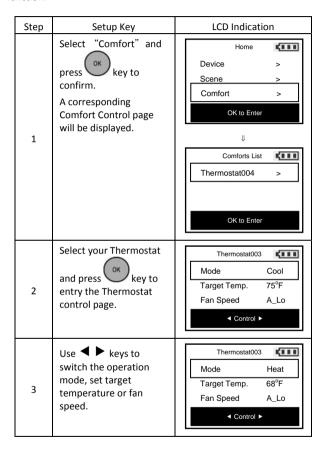

Sensor information


After adding "Binary Sensor / Multi-level Sensor" to your ZRC-100, you can monitor the sensor temperature via the corresponding Sensor function.

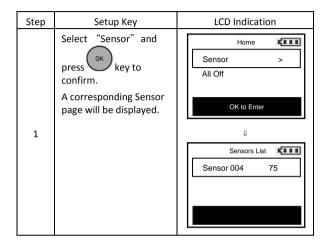


Device Configure

It is allow to Move/Rename/Delete the device after added into the network under the Device Configure function.

Step	Setup Key	LCD Indication
	Press and hold ◀ ► keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort >
1		OK to Enter
		Setup LITT
		Add Device >
		Delete Device >
		Add to Scene >

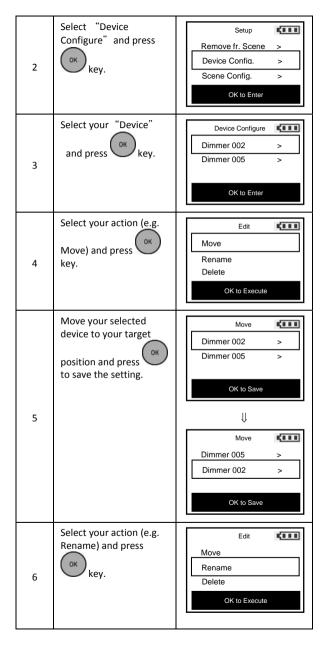

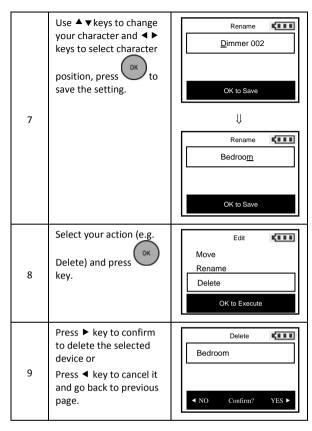



Note 1: ZRC-100 supports up to 15 characters in a row for the device name.


Note 2: This process will only remove the devices/EPs from its catalogue but will not exclude it from the network.

Scene Configure

It is allow to Move/Rename/Clear the scene after added into the scene under the Scene Configure function.

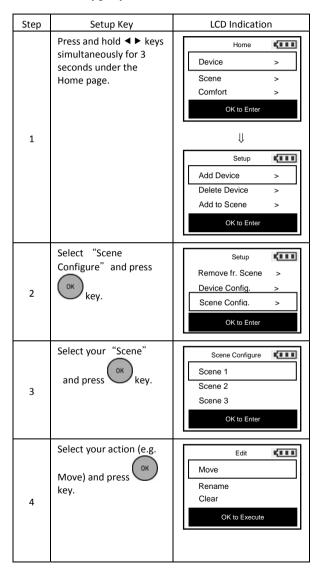

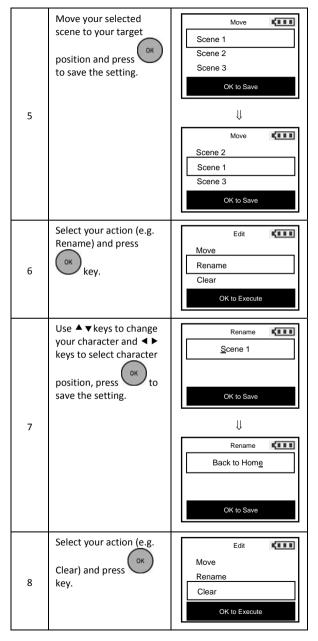

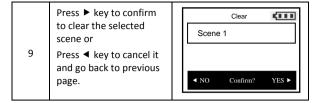


Note 1: ZRC-100 supports up to 15 characters in a row for the scene name.


Note 2: This process will only remove the scene devices/EPs from its assigned scene but will not exclude it from the network.


Note 3: The above steps are needed if ZRC-100 to be a secondary remote controller and the Scene information mapping from gateway / primary controller is unsuccessful.

Comfort / Sensor Configure

It is allow to Move/Rename/Delete the device after added into the network under the Comfort / Sensor Configure function.

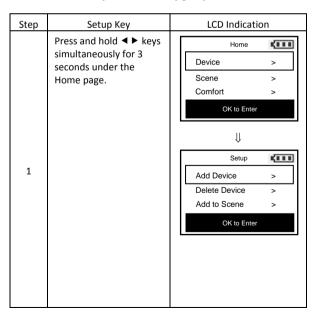

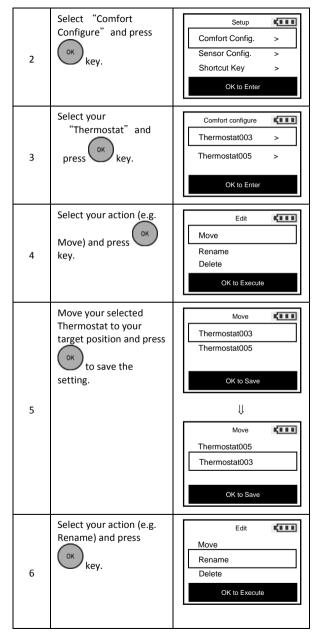

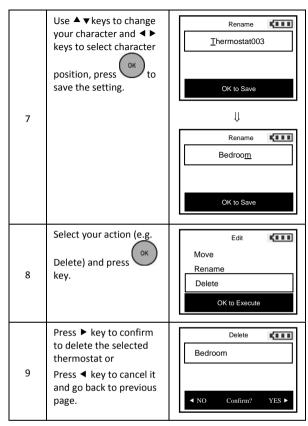


Note 1: ZRC-100 supports up to 15 characters in a row for the scene name.

Note 2: This process will only remove the devices/EPs from its catalogue but will not exclude it from the network.

Shortcut key


ZRC-100 provides a shortcut key which can jump to your target Comfort / Sensor device or turn On/Off your device/ Scene.


Step	Setup Key	LCD Indication
1	Press and hold ◀ ▶ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Setup Add Device > Delete Device >
		Add to Scene > OK to Enter
2	Select "Shortcut key" and press key.	Setup Comfort Config. > Sensor Config. > Shortcut Key > OK to Enter
3	Select your target shortcut key by ◀ ▶ keys (e.g. F1) then press key.	Shortcut Key F1 F2 F3 Select Hard Key
4	Select your target Device / Scene / All Off for your shortcut key or Select your target shortcut page (Comfort / Sensor) for your shortcut key.	Select Device > Scene > Comfort > OK to Enter

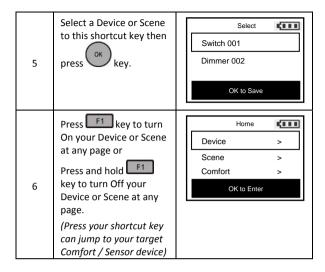

The shortcut keys can be configured as events trigger keys which can send out a predefined Node ID (destination), Basic Set value (event case and action). The destination device (e.g. gateway) will trigger a predefined event/scenario (e.g. HOME, STAY, AWAY) once received this Basic Set value. The event case and action should be configured by destination side (e.g. gateway).

Step	Setup Key	LCD Indication
Step 1	Press and hold ◀ ▶ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Setup Add Device > Delete Device > Add to Scene > OK to Enter

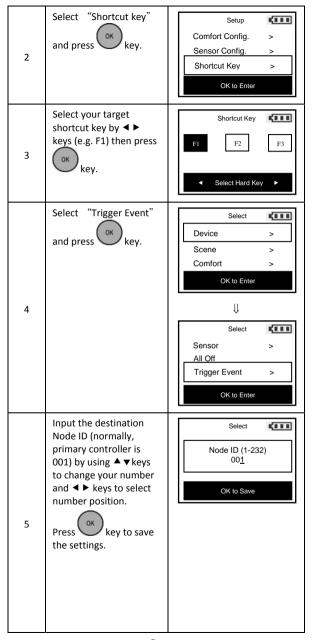

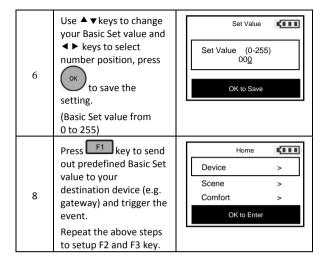

Z-Wave Advanced Setup

Configure Association


(Assign Association for Two Devices)


The ZRC-100 can be used to assign one device to automatically interact directly with another device.

For example you can assign a door sensor (primary node) to turn on the light switch (secondary node) when the door is opened.

Adding Device/End-point to an Association Group

Step	Setup Key	LCD Indication
1	Press and hold ◀ ▶ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Setup Add Device > Delete Device > Add to Scene > OK to Enter
2	Select "Advanced Setup" and press key.	Setup Advanced Setup > System Settings > About > OK to Enter
3	Select "Config. Assoc." and press ok key.	Advanced Setup Config. Assoc. > Configuration > Reset to Default > OK to Enter

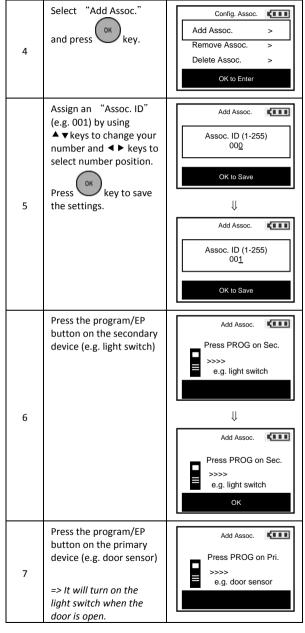


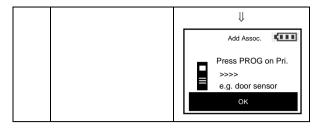


Note 1: Your target device must be included in the network before this setup procedure, please refer to [Adding Device to the Network] section.

Removing Device/End-point from an Association Group

Step	Setup Key	LCD Indication
1	Press and hold ◀ ▶ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > Setup Add Device > Delete Device > Add to Scene > OK to Enter
2	Select "Advanced Setup" and press key.	Setup Advanced Setup > System Settings > About > OK to Enter

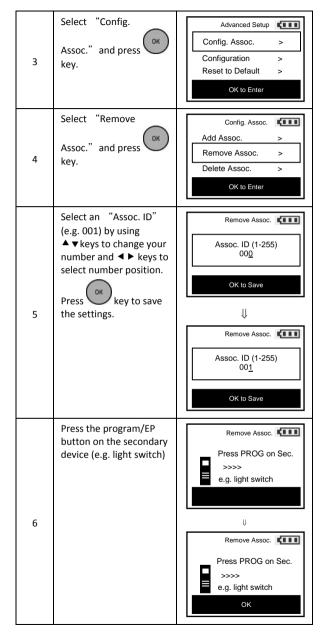


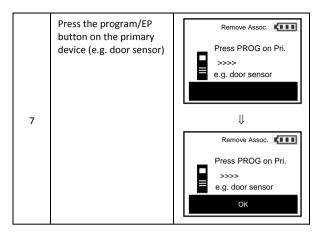

Note 1: This process will only remove the target device/EP from its assigned association group but will not exclude it from the network.

Deleting an Association Group

Step	Setup Key	LCD Indication
1	Press and hold ◀ ▶ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Setup Add Device > Delete Device > Add to Scene > OK to Enter
2	Select "Advanced Setup" and press key.	Setup Advanced Setup > System Settings > About > OK to Enter

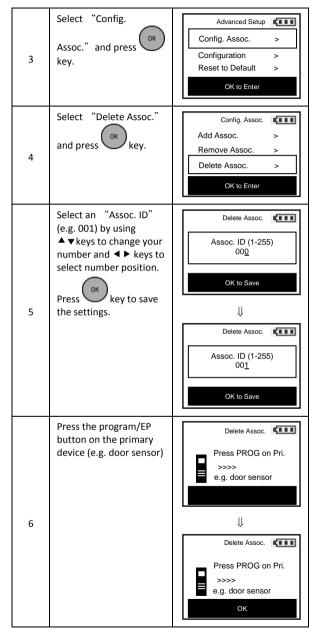


Note 1: This process will only remove the group devices/EPs from its assigned association group but will not exclude it from the network.

Change Device Configuration

This function is used to modify the parameter of the Z-Wave device via the configuration command class.


Look up the Parameter No. and Parameter Value of the target device from the device user manual before you start the below process.


Step	Setup Key	LCD Indication
1	Press and hold ◀ ▶ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Setup Add Device > Delete Device > Add to Scene > OK to Enter
2	Select "Advanced Setup" and press key.	Setup Advanced Setup > System Settings > About > OK to Enter
3	Select "Configuration" and press ok key.	Advanced Setup Config. Assoc. > Configuration > Reset to Default > OK to Enter

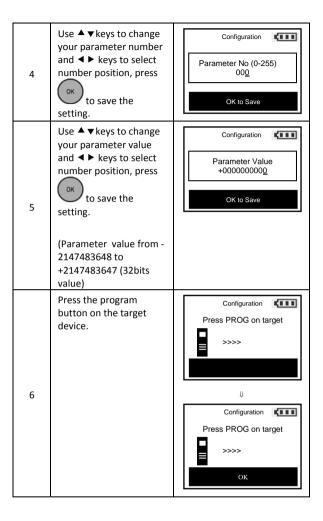

Resetting Your Network


You can reset your ZRC-100 to clear all Z-Wave network and device information by the following steps:

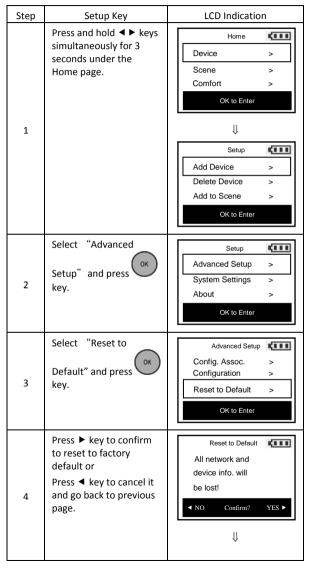


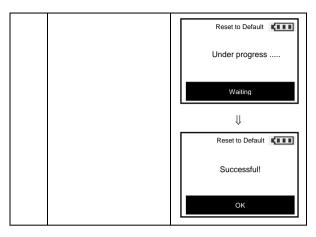


Note: After reset the remote, each device should individually perform in the section on "Delete device from the network" and "Add device to the network".

System Settings

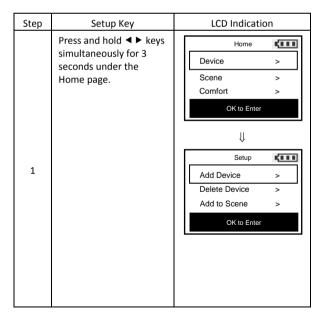


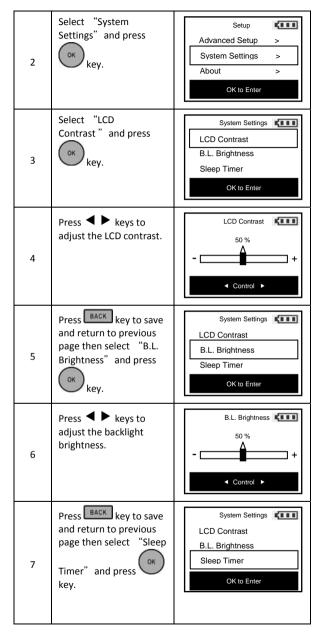

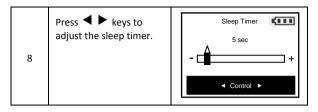

Note 1: The batteries service life will be shortened if the sleep timer set to higher value.

About ZRC-100

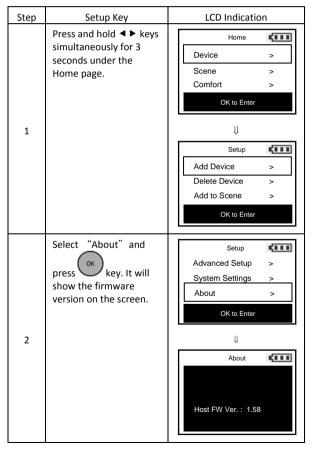

Z-Wave Network Setup

Learning Mode

(Replicating All Network and Device Information from a Primary Controller to your ZRC-100)

Your ZRC-100 can:


- Copy the settings from another Z-Wave controller.
- Be included into existing Z-Wave network and <u>act as a secondary</u> <u>remote controller</u> or back to a new primary remote controller.
- Be excluded from the Z-Wave network.

Step	Setup Key	LCD Indication	
1	Place the two controllers close to each other.	-	
2	Press and hold ▲ ▼ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Network Setup Learning Mode > Scan Devices > Create Pri. > OK to Enter	
3	Mode" and press Node" and press Node" and press Node" and press Node" and press Node and	Network Setup Learning Mode > Scan Devices > Create Pri. > OK to Enter	

Place the two controllers close to each other.

(LCD display <u>OK</u> if the learning mode is successful.

LCD display <u>ERROR</u> if the learning mode is unsuccessful.)

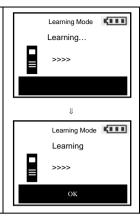

CAUTION

4

Scene Controller Configuration Command and Association Command

If scenes are copied to a secondary controller using the replication function, those scenes cannot be modified using the Scene Controller Configuration and Association Commands. If modifications are desired, it is recommended to delete all these scenes from the controller prior to using the two aforementioned commands.

Scan Devices from network


In most cases, Z-Wave gateway is the primary controller (control center), all Z-Wave devices will be added / (inclusion) by the Z-Wave gateway. Normally, it is need to click the PROG button of the Z-Wave device to add into the network and one by one. The gateway will create a control page / section to Z-Wave devices. User can control / monitor Z-Wave devices under the control page.

ZRC-100 can discover all existing Z-Wave devices from the network and <u>no need to click the PROG button one by one</u>, discovered devices will be re-assigned to their default categories (Devices, Comforts and Sensors), and names will be re-assigned with default naming in ascending order which is implemented by the function of "<u>Scan</u> Devices".

To implement this function, your ZRC-100 is needed to follow below steps:

- 1) Assume all Z-Wave devices have been added by gateway.
- ZRC-100 should act as a secondary controller (receive all network and device information from a primary controller), please refer to "Learning Mode" section in this manual.
- 3) Execute the "Scan Devices" function with below steps.

Step	Setup Key	LCD Indication
1	Press and hold ▲ ▼ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Network Setup Learning Mode > Scan Devices > Create Pri. > OK to Enter
2	Select "Scan Devices" and press key.	Network Setup Learning Mode > Scan Devices > Create Pri. > OK to Enter
3	Press ▶ key to confirm scan devices or press ◀ key to cancel it and go back to previous page. The remote will scan all devices from network, discovered devices will be re-assigned to their default categories (Devices, Comforts and Sensors) names will be re-assigned in ascending order. The LCD will display OK and go back	Caution! This action will erase all existing device names NO Confirm? YES Scan Devices This will take from several min to one hr! 1/5 Waiting

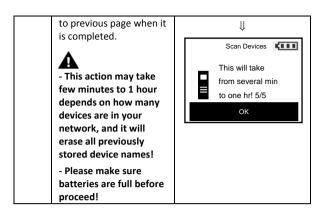


Create a Primary Controller

(Transferring Only Network Information to a New Primary Controller)

You can just transfer network information to another remote so that it will act as a new primary remote and ZRC-100 will act as a secondary remote controller. This <u>primary shift</u> is done by following the steps below.

Step	Setup Key	LCD Indication
1	Place the two controllers close to each other.	-
2	Press and hold ▲ ▼ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Network Setup Learning Mode > Scan Devices > Create Pri. > OK to Enter

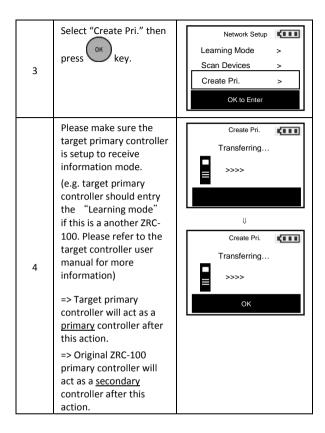


Create a Secondary Controller

(Copying Network Information to a Secondary Controller)

You can add a secondary controller to your network and copy all of your primary controller's network information to the secondary controller by following the steps below.

Step	Setup Key	LCD Indication
	Place the two controllers close to each other.	
1		-

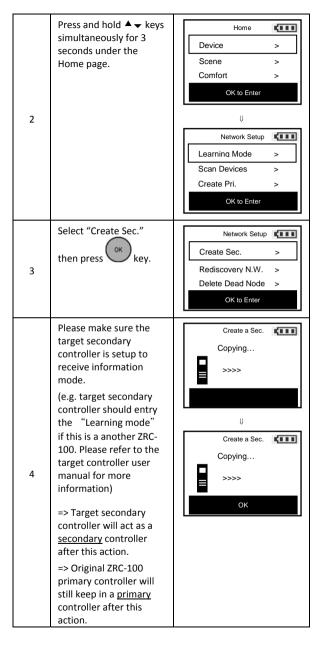


Rediscover Network (N.W.)

During normal operation the network decides the best path to route signals from one device to another. If devices are moved to different positions in the installation, it is recommended to rediscover the network so the routing path will be re-configured.

Step	Setup Key	LCD Indication
1	Press and hold ▲ ▼ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Network Setup Learning Mode > Scan Devices > Create Pri. > OK to Enter
2	Select "Rediscover N.W." and press key.	Network Setup Create Sec. > Rediscovery N.W. > Delete Dead Node > OK to Enter
3	The remote is updating the network information. The LCD will display OK and go back to previous page when it is completed.	Rediscover N.W. Updating 1/5 Waiting Rediscover N.W. Updating Fraction of the property

Delete Dead Node from Network

Step	Setup Key	LCD Indication
1	Press and hold ▲ ▼ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > Network Setup Learning Mode > Scan Devices > Create Pri. >
	Select "Delete Dead	OK to Enter
2	Node" and press ok	Create Sec. > Rediscovery N.W. > Delete Dead Node > OK to Enter
3	The remote is checking the dead node. The LCD will display OK and go back to previous page when it is completed.	Delete Dead Node Checking 1/5 Waiting Delete Dead Node Checking 5/5 OK

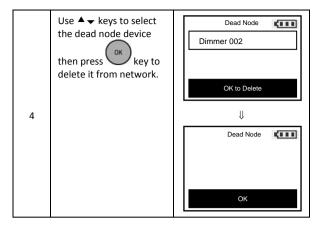


Note 1: Only the Primary Controller can be used to include or delete devices from a network. It is recommended that you mark the primary controller for each network for ease in modifying your network.

Listening Mode

There are multiple usages by entering this mode:

- Version command class: To get application software version, the Z-Wave protocol version and the supported Z-Wave command version of this controller.
- Manufacturer command class: To get the manufacture ID, product type ID and the product ID of this controller.
- Scene configuration command class: Home gateway can bundle a scene ID to a group ID using this command.
- Association command class: To create and maintain associations in this remote.

Step	Setup Key	LCD Indication
1	Place the two controllers close to each other.	-
2	Press and hold ▲ ▼ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort >

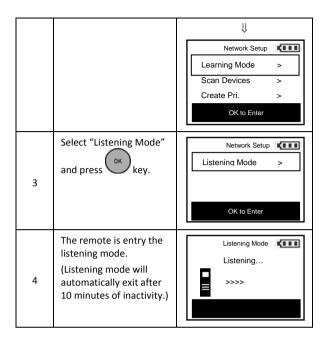

Note1: The mode must not be exited during communication process with another controller. Please wait for entire communication process to be completed.

Note2: It is not allowed to enter any user input from the remote's hard key after entry this Mode.

Wireless Information

This device has an open-air line-of-sight transmission distance of 25m which complies with the Z-Wave standards. Performance can vary depending on the amount of objects in between Z-Wave devices such as walls and furniture. Every Z-Wave device set up in your network will act as a signal repeater allowing devices to talk to each other and find alternate routes in the case of a reception dead spot.

Radio frequency limitations:

- 1. Each wall or object (i.e.: refrigerator, bookshelf, large TV, etc) can reduce the maximum range of 20m by up to 20 to 30%.
- Plasterboard and wooden walls block less of the radio signal then concrete, brick or tile walls which will have more of an effect on signal strength.
- Wall mounted Z-Wave devices will also suffer a loss of range if they are housed in metal junction boxes which could also reduce the range by up to 20 to 30%.

Maintenance

- 1 Do not expose your unit to dust, strong sunlight, humidity, high temperatures or mechanical shocks.
- 2 Do not use old and new batteries together as old batteries tend to leak.
- 3 Do not use corrosive or abrasive cleansers on your unit.
- 4 Keep the unit dust free by wiping it with a soft, dry cloth.
- 5 Do not disassemble your unit, it contains no user-serviceable parts.

Frequently asked questions

- Q Why won't my remote work with the Z-Wave devices I purchased from another country?
- A Due to different countries regulations Z-Wave products from different regions are set to different frequencies. Before purchasing new devices make sure you have checked that the device is compatible in your region.
- Q Do I need an electrician to install Z-Wave products in my house?
- A Installation can be simple. In some cases all you need to do is attach the Z-Wave plug in module into the wall socket. For more advanced in-wall modules you may need this done by a qualified technician.

O What can the ZRC-100 do for me?

A single Z-Wave network can include 232 nodes. If necessary, more than one network can be bridged to extend the number of nodes further, although this is normally not needed in a residential environment.

The total number of controllable End-point (EP) / device / sensor is 128 items which is listed on the "Device" and "Sensor" page. ZRC-100 also supports 6 thermostats which are listed on the "Comfort" page. You can control up to 12 scenes (Scene On/Off) with your ZRC-100. Each Scene supports up to 32 Z-Wave devices or End-point (EP).

It is able to control the Z-Wave lighting devices (Dimmer or Switch) with multi-channel, window shades, thermostats, Z-Wave to AC IR extender and door lock. Also, it is support Multi-level Sensor and that can show the current room temperature on the screen.

- Q If my Z-Wave devices had already added into my Z-Wave gateway (primary controller) network, what should I do for my ZRC-100? How to copy my scenes settings to my ZRC-100?
- A Your ZRC-100 can act as a <u>secondary controller</u> with network information about other devices and scenes setting acquired from your gateway (primary controller).

Please refer to user manual with below steps:

- ZRC-100 should enter the "<u>Learning Mode</u>" [step of C1] (Replicating All Network and Device Information from a Primary Controller to your ZRC-100), for details please refer to ZRC-100 user manual.
- ii) Make sure the gateway scenes were mapped to your Scene ID number and activated event for Scene Controller. You may need to setup the trigger settings on gateway before next steps.
- iii) Gateway should enter the "Inclusion Mode" to add the ZRC-100 into the network and replicating all network and device information from a primary controller to your ZRC-100, please refer to gateway user manual.
- iv) Now, ZRC-100 will act as a secondary controller. All scenes and device node information will transfer from gateway to ZRC-100, you can On/Off the scene through ZRC-100 [step of A3.1].
- Your ZRC-100 will acquire scene configuration and node information only. That means you have scene copied from gateway but you need to include individual Z-Wave device by

ZRC-100 if you want to use ZRC-100 to control them. individually.

Can I include all Z-Wave devices from the network by ZRC-100 and no need to click the PROG button for each device?

Α Yes! ZRC-100 provides a useful function which is "Scan Devices" that allows rediscovering all Z-Wave devices from the network.

Please refer to user manual with below steps:

- Assume all Z-Wave devices have been added by gateway.
- ZRC-100 should act as a secondary controller [step of C1]. ii)
- Execute the "Scan Devices" function [step of C2].

ZRC-100 will rediscover Z-Wave devices from the network. discovered devices will be re-assigned to their default categories (Devices, Comforts and Sensors), and names will be re-assigned with default naming in ascending order.



- $m{\Lambda}$ This action may take few minutes to 1 hour depends on how many devices are in your network, and it will erase all previously stored device names!
 - Please make sure batteries are full before proceed!
- Now, all Z-Wave devices will appear on the Device, Comfort and Sensor categories. You can rename your device individually if needed.

Q Can I use 2 or more ZRC-100 controllers in my house at one time?


You can use multiple ZRC-100 around your house by assigning one remote to be the primary remote and have an additional secondary controller.

Q What is multi-channel device?


The multi-channel command class used to control one or more Α end points in a given device that supports this command class.

There are several kinds of multi-channel products in the market such as Z-Wave wall switch / dimmer and power strip. It is able to control the end-point individually.

Z-Wave wall switch / dimmer

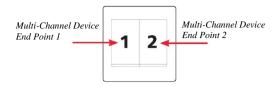

Z-Wave power strip

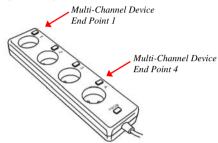

Please refer to the target device user manual for more information such as Inclusion / Exclusion and add End Point to a Scene / Group.



Some multi-channel device in the market may lack of the capability to report Multi-Channel Capability Report (MCCR) for each end point (channel).

(The MCCR is used to determine what node shall receive the association commands containing what node in the network it shall be associated to.)

In this case, the multi-channel device can only be individually controlled by ZRC-100 under Device Menu, it can not be individually assigned to different scenes, and neither can it be associated to primary sensors (e.g. door/window sensor).

There are many brands can supports multi-channel with MCRR in the market such as Merten, MK Astral, Fibaro, etc...

If you want to assign individual end-point (channel) to different scene or make individual Association with other devices, we recommend you to check with your local dealer to make sure the multi-channel device can report Multi-Channel Capability Report (MCCR) for each end point.



Q Why do I need a different module for outdoor lighting?

A The outdoor module is designed to withstand various weather conditions including heat, rain and snow.

Q If I lost my ZRC-100 will I also lose my settings?

A Yes and no, if you lose your primary ZRC-100 you will need to add all the Z-Wave devices to your new primary remote again. If you lose the secondary one you can replicate all the Z-Wave setup information from your primary remote onto a new secondary remote.

Q Can the ZRC-100 also operate Zigbee products?

A The ZRC-100 is not compatible with any Zigbee product.

Technical Specifications

	BW8380US (ZRC-100US)
	BW8380EU (ZRC-100EU)
Model No.	BW8380CN (ZRC-100CN)
Woder No.	BW8380AU (ZRC-100AU)
	BW8380BR (ZRC-100BR)
	BW8380IN (ZRC-100IN)
	908.4MHz (ZRC-100US)
	868.4MHz (ZRC-100EU)
RF Frequency	868.4MHz (ZRC-100CN)
The Frequency	921.4MHz (ZRC-100AU)
	921.4MHz (ZRC-100BR)
	865.2MHz (ZRC-100IN)
LCD	FSTN Positive Transflective
	128x64 dots at A.A.= 35.8x21.7mm
LCD backlight color	White or Amber
Max. Range	up to 82ft (25m) outdoor line of sight, in
Iviax. Natige	unobstructed environment
Power	Dry cell AAA x 4pcs
T.	operation: 0~40°C
Temperature	storage: -20~60°C
Humidity	20~85%, non-condensing
Dimension (LxWxT)	161mm x 52mm x 15mm
Weight	75g (Batteries excluded)

Checking Accessories

After opening the cover of the packing box, check that the following accessories are included.

- ZRC-100 Z-Wave Remote Controller
- ZRC-100 Quick Setup Guide
- ZRC-100 User Manual (download from our website)
- Warranty sheet

FCC Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

Warnings

- Do not modify the unit in any way.
- Risk of fire.
- Risk of electrical shock.
- Risk of burns.
- Do not dispose of electrical appliances and unsorted municipal waste, use separate collection facilities. Contact your local

government for information regarding the collection systems available.

- There is no user serviceable parts in this unit.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Use only power supplies listed in the user instructions.

Exercise extreme caution when using Z-Wave devices to control appliances. Operation of the Z-Wave device may be in a different room then the controlled appliances, also an unintentional activation may occur if the wrong button on the remote is pressed. Z-Wave devices may automatically be powered on due to timed event programming. Depending upon the appliance, these unattended or unintentional operations could possible result in a hazardous condition. For these reasons we recommend the following:

 Do not include Z-Wave devices to control electric heaters or other appliances which may present a hazardous condition due to an unattended or unintentional or automatic power on control.

Caution

- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.

